

APから電波が出ていない?







APから電波が出るまで

- 1. SSIDを定義し、SSIDを有効(ON)にする
- 2. SSIDをどの電波(WA6638-JPはradio1, radio2, radio3、WA6320-JP はradio1, radio2)から出すかを指定する
- 3. それぞれのAPの電波(radio)をONにする

補足

上記2,3はdefault groupに定義することにより、それぞれのAPに 設定する必要はありません。

APから電波が出るまで



APから電波が出るまで

AP定義のテンプレート		AP定義のテンプレートが適用さ	れる	
# default-groupの定義 # r # wla wlan ap-group default-group vla vlan 1 ap ap-model WA6638-JP ap radio 1 apr radio enable rad service-template 1 ra radio 2 s radio enable rad service-template 2 rad radio 3 gig gigabitethernet 1 te ten-gigabitethernet 1 #	reception groupの定義 lan ap-group reception lan 1 b LOBBY b ENTRANCE b-model WA6638-JP radio 1 radio enable service-template 3 dio 2 dio 3 gabitethernet 1 ten-gigabitethernet 1	# default-groupが適用される wlan ap ROOM01 model WA6638-JP serial-id 219801A2KF8209E0007R vlan 1 radio 1 radio 2 radio 3 gigabitethernet 1 ten-gigabitethernet 1 # wlan ap ROOM02 model WA6320-JP serial-id 219801A2YF8216E00036 vlan 1 radio 1 radio 2 gigabitethernet 1 #	# reception groupが適用される wlan ap LOBBY model WA6638-JP serial-id 219801A3M68227E0001B vlan 1 radio 1 radio 2 radio 3 gigabitethernet 1 # wlan ap ENTRANCE model WA6638-JP serial-id 219801A3M68227E0001B vlan 1 radio 1 radio 2 radio 3 gigabitethernet 1 ten-gigabitethernet 1	<pre># 個別に定義する wlan ap xxxxx01 model WA6320-JP serial-id 219801A3M68227E0001B vlan 1 radio 1 radio enable service-template 1 radio 2 gigabitethernet 1 # Wlan ap xxxx02 model WA6320-JP serial-id 219801A3M68227E0001B vlan 1 radio 1 radio 2 radio enable service-template 2 gigabitethernet 1</pre>

1. SSIDのサービスがOFFではSSIDは有効ではありません

	НЗС												
	Actions		All Ne	All Networks > Wireless Configuration > Wireless Networks > Wireless Networks									
	Dashboard			Wireless Networks Hotspot2.0									
	Quick Start	>		\mathcal{S} \oplus									
手順	Monitoring	>		Wireless Service No.	ame 🔺	SSID	Wireless Service	Forwarding Type					
	Wireless Configuration	~	(□ 1		GUEST	• OFF	Local					
2	Wireless Networks												
	AP Management												

1. SSIDのサービスをONにするには

НЗС	H3O	WX5	540H-HCL						💾 Save 幹	Roadmap 🚨 admin
Actions		All Ne	tworks > Wireless Configuration > W	/ireless Networks	s > Wireless Networks					
Dashboard		_	Wireless Networks							
Quick Start	>		C ⊕					Sear	ch	毛順 [《] 🧃
Monitoring	>		Wireless Service Name	SSID	Wireless Service	Forwarding Type	Authentication Mode	Cipher Suite	Default VL	AN Actions
Wireless Configuration	~	(□ 1	GUEST	ON	Centralized	Open		1	
Wireless Networks						表示さ	きれているSSIDの	D右端の編集 ポ	タンをク	リックして
AP Management						設定な	を変更します			
Wireless QoS										
Wireless Security	>									
Radio Management										
Client Proximity Sensor										
Applications		Т	otal 1 entries, 1 matched, 0 selecter	1.Page 1 / 1.						14 <4 b> b1 💡

1. SSIDのサービスをONにするには



1. SSIDのサービスがOFFではSSIDは有効ではありません

注:以下の表示はコンソールからdisplay current-configurationを入力した結果です

SSIDのサービスがOFF

wlan service-template 1 **ssid GUEST** fail-permit enable keep-online akm mode psk preshared-key pass-phrase cipher \$c\$3\$AJ48rrcwArZS5K5W4IcPV4QJt3R7 VKcBRMItGMQ= cipher-suite ccmp cipher-suite tkip security-ie rsn security-ie wpa



SSIDのサービスがON

wlan service-template 1 ssid GUEST fail-permit enable keep-online akm mode psk preshared-key pass-phrase cipher \$c\$3\$AJ48rrcwArZS5K5W4IcPV4QJt3R7 VKcBRMItGMQ= cipher-suite ccmp cipher-suite tkip security-ie rsn security-ie wpa service-template enable

2. SSIDをどの電波に乗せるかを指定

デフォルトの装置名はアクセスポイントのMACアドレスです。 例えば以下の場合の表示はモデルはWA6638-JPで、装置名は f474-880b-4c40 となります。



AP裏面のシリアル番号、MACアドレス



#装置のシリアル番号,MACアドレス表示コマンド
H3C>display device manuinfo
DEVICE_NAME:WA6638
DEVICE_SERIAL_NUMBER:219801A
MAC_ADDRESS: F474-880B-4C40
MANUFACTURING_DATE:2020-02-29
VENDOR_NAME:H3C

2. SSIDをどの電波に乗せるかを指定

All Networks > Wireless Configuration > Wirele	ss Networks > Wireless Networks > Advanced Settings(1)	
WLAN Authentication Authoriz	ation Intrusion Protection 手順面 Intrusion Protection 手順 Intrusion Protection 上	lotspot2.0
Bind to APs	Candidate 候補	Selected 選択されたもの
	Search for Q	Search for
	>>	* *
注:ここでの <mark>f010-903e-f7e0</mark> はアクセスポイントのMACア	f010-903e-f7e0 (Radio15G)	
ドレス。多くのアクセスポイン トが存在するとすべての情報が	f010-903e-f7e0 (Radio3 2.4G)	
表示されるので、アクセスポイ ントの名前は3F-ROOM1のよ	電波を出したい電波をクリックすると	
うに変更すると管理しやすい。	右側に移動し選択されます	
Apply Cancel	<設定を適用(Apply)させます	

2. SSIDをどの電波に乗せるかを指定

radioにSSIDが指定されていない

```
wlan ap f010-903e-f7e0 model WA6638-JP
serial-id 219801A24F8201E0000J
mac-address f010-903e-f7e0
anchor-ap enable
radio 1
radio 2
radio 3
gigabitethernet 1
ten-gigabitethernet 1
```

radio1,2にSSIDが指定された

wlan ap f010-903e-f7e0 model WA6638-JP
serial-id 219801A24F8201E0000J
mac-address f010-903e-f7e0
anchor-ap enable
radio 1
service-template 1
radio 2
service-template 1
radio 3
gigabitethernet 1
ten-gigabitethernet 1

3. 特定のAPの電波(radio1, radio2)にSSIDを乗せて電波を出す

Actions		All Natworks N Wireless Configuration NAD Ma	nagement \ A	D									
Actions			nagement / A	IF									
Dashboard		AP AP Groups AP Global Settin	gs										
Quick Start	>	AP Groups	C	⊕ Ľ						Searc	h		
Monitoring	>	Search Q	🗆 Na	ame 🔺	Installation Da Description	AP Group	Туре	Model	Serial ID	MAC Address	Radios	Status	Actio
Wireless Configuration	~	🛺 AP Groups	□ f(010-903e-f7	2023-06-10	default-group	Manual AP	WA6638	219801A24F8	F0-10-90-3E-F7-E0	802.11ax(5GH	a Online	Ø
Wireless Networks						(3)特定	EのAF	の電波	の設定を	:変更(e	dit) L	ま
AP Management													

注:ここでのf010-903e-f7e0はアクセスポイントのMACアトレス。多くのアクセスポイントか存 在するとすべての情報が表示されるので、アクセスポイントの名前は3F-ROOM1のように変更す ると管理しやすい。

3. 特定のAPの電波(radio1, radio2)にSSIDを乗せて電波を出す

	Map File 📍	Select	Ŧ	
	AP connection priority 🣍	4(Inherit)		(0-7, Inherit by default)
	CAPWAP tunnel keepalive	Echo interval 📍		
		10(Inherit)		seconds (0,5-255, Inherit by default)
	Request retransmission	Interval		
		5(Inherit)		seconds (3-8, Inherit by default)
		Retransmission atte	empts	
		3(Inherit)		(2-5, Inherit by default)
	Statistics report interval	50(Inherit)		seconds (0-240, Inherit by default)
	AC Election 💡	○ 0N	OFF	
ᆂᆘᆂ	CAPWAP tunnel encryption	🦰 🔿 Enable	○ Disable	Inherit (Disabled)
于順	Firmware upgrade 📍	○ Enable	○ Disable	Inherit (Enabled)
	5GHz(1) radio	ON	○ 0FF	 Inherit(Disabled)
	SGHZ(2) radio		O OFF	() Inherit(Disabled)
	特定の電波	をのいに	します	
	手順	Map File AP connection priority CAPWAP tunnel keepalive Request retransmission Statistics report interval AC Election Statistics report interval AC Election FIM SGHz(1) radio SGHz(2) radio Z.4GHz(3) radio 特定の電波	Map File Select AP connection priority 4(Inherit) AP connection priority 4(Inherit) CAPWAP tunnel keepalive Echo interval IO(Inherit) 10(Inherit) Request retransmission Interval S(Inherit) S(Inherit) Retransmission atte 3(Inherit) Statistics report interval SO(Inherit) AC Election 0 N CAPWAP tunnel encryption 0 N CAPWAP tunnel encryption Enable Firmware upgrade 0 N SGHz(1) radio 0 N SGHz(2) radio 0 N Z.4GHz(3) radio 0 N There or Exb consci 0 N	Map File Select AP connection priority 4(Inherit) CAPWAP tunnel keepalive Echo interval CAPWAP tunnel keepalive Interval 10(Inherit) 10(Inherit) Request retransmission Interval Statistics report interval S(Inherit) AC Election ON OFF AC Election ON OFF Statistics report interval SI(Inherit) Disable Statistics report interval OIN OFF AC Election ON OFF G1 SGHz(1) radio ON OFF Statistics report interval OIN OFF G1 SGHz(2) radio ON OFF G1 SGHz(2) radio ON OFF Statistics report interval OIN OFF G1 SGHz(2) radio ON OFF Statistics ON OFF OFF G1 SGHz(2) radio ON OFF Statistics ON OFF OFF Statistics ON OFF OFF </th

3. 特定のAPの電波(radio1, radio2)にSSIDを乗せて電波を出す

radioが有効になっていない

```
wlan ap f010-903e-f7e0 model WA6638-JP
serial-id 219801A24F8201E0000J
mac-address f010-903e-f7e0
anchor-ap enable
radio 1
service-template 1
radio 2
service-template 1
radio 3
gigabitethernet 1
ten-gigabitethernet 1
```

radio1,2が有効になった

wlan ap **f010-903e-f7e0** model WA6638-JP serial-id 219801A24F8201E0000J mac-address f010-903e-f7e0 anchor-ap disable radio 1 radio enable service-template 1 radio 2 radio enable service-template 1 radio 3 gigabitethernet 1 ten-gigabitethernet 1

この状態ではじめて電波から出すSSIDを指定 して電波を有効にし、電波にSSIDを乗せて送 出します





02 アクセスポイントの表示名を変更する

特定のAPの名前を変更する

	НЗС										💾 Save 😭	Roadmap	🔔 admin
	Actions		All Networks > Wireless Configuration > AP Ma	nagement > AP									
	Dashboard		AP AP Groups AP Global Settin	gs AP Provisioning	AP Group Provisioning								(?)
	Quick Start	>	AP Groups	€ €	ī [土]					Search			Q, Q;
手順	Monitoring	>	Search Q	🗖 Name 🔺	Installation Descrip	tion AP Group	Туре	Model	Serial ID	MAC Address	Radios	Status	Actions 📰
	Wireless Configuration	~	AP Groups	✓ 7494-4f8d	2023-08-05	default-group	Manual AP	WA6320	H3C_74-94	74-94-4F-8D-0	802.11ax(5	O nline	
	-	_		9634-3af0	2023-08-05	default-group	Manual AP	WA6320	H3C_96-34	96-34-3A-F0-0	802.11ax(5	O nline	2 … 💼
	Wireless Networks	_											
(2)	AP Management												
	Wireless QoS												
	Wireless Security	>											
	Radio Management												
	Client Proximity Sensor	r											
	Applications			Total 2 entries, 2 mat	ched, 1 selected.Page 1 / 1.	4		F	Rename			1	ia <a>> >i 😜
	Network Security	>		Delete	Reset Add AP	to Group Rena	ne						
					System View	Network View				Acc 2	ess Points 0	ilients 0	Event Logs ⊗ 0 ▲ 2 1 7

特定のAPの名前を変更する(続き)

НЗС		💾 Save 🗳 R	Roadmap 🚨 admin
Actions	All Networks > Wireless Configuration > AP Management > AP		
Dashboard	AP AP Groups AP Global Settings AP Provisioning AP Group Provisioning		0
Quick Start >	AP Groups C 🕑 🖆 🗋	Search	Q. Q
Monitoring >	Search Rename Rename	X MAC Address Radios	Status Actions 🗮
Wireless Configuration 🗸	and the second s)4 74-94-4F-8D-0 802.11ax(5	a Online 🗹 🚥 🛍
Wireless Networks	AP name 手順 7494-4f8d-0200	14 96-34-3A-F0-0 802.11ax(5	â Online 🗹 ™ 🛍
AP Management	New name 3F-ROOM1 (1-64 chars)		
Wireless QoS			
Wireless Security >	2 Apply Cancel		
Radio Management			
Client Proximity Sensor			
Applications	Total 2 entries, 2 matched, 1 selected.Page 1 / 1.		14 <4 b> b1 Q
Network Security >	Delete Reset Add AP to Group Rename		
	System View Network View	Access Points Clie	ents Event Logs 0 0 2 0 4 2 0 7

C	Ð 🗄							Search
	Name 🔺	Installation	Description	AP Group	Туре	Model	Serial ID	MAC Address
	3F-R00M1	2023-08-05		default-group	Manual AP	WA6320	H3C_74-94	74-94-4F-8D-0
	3F-R00M2	2023-08-05		default-group	Manual AP	WA6320	H3C_96-34	96-34-3A-F0-0
С Т	のように名前 ラーが発生し	を変えることし	こよりどこに言)エラーメッセ	设置されている ージにこの名	るアクセス 、 前が表示。	ポイントな0 されるので)かがはっきり 管理しやすい	して、

特定のAPの名前を変更する(続き)

HBC				
Actions	All Networks > Wireless Configur	ation > Wireless Networks > Wireless Networks >	Advanced Settings(1)	
Dashboard	WLAN Authentication	Authorization Intrusion Protection	Key Management Binding A	ccess control Hotspot2.0
Quick Start >	Bind to APs	Candidate		Selected
Monitoring >		Search for		C Search for
Wireless Configuration 🗸			}}	
Wireless Networks		3F-R00M1 (Radio2 2.4G) 3E-R00M2 (Radio2 2.4G)	このように名前	を変えることに
AP Management		3F-ROOM2 (Radio1 5G)	よりSSIDをどの)アクセスポイン
Wireless QoS		3F-ROOM2 (Radio1 5G)	るかが管理した	-来せて这日させ
Wireless Security >				
Radio Management				
Client Proximity Sensor	Apply Can	cel		

補足. どのアクセスポイントに何台のクライアントが接続されているか?

	H ₃ C	H3	C WX	5540H-HC	ïL				
	Actions		All N	etworks > Mon	nitoring > Clients >	Clients			
	Dashboard			Clients					
手順	Quick Start	>		Clients					
1	Monitoring	~		Total				5GHz	
	Wireless Networks					1			
	Access Points			By AP					
2	Clients			by ni	AP Name		Clients(5GHz)	Clients(2.4GHz)	Q
	Wireless Security				3F-ROOM2		1	0	



www.h3c.com